ASSEMBLING INSTRUCTIONS
ASSISTANT'S STOOL

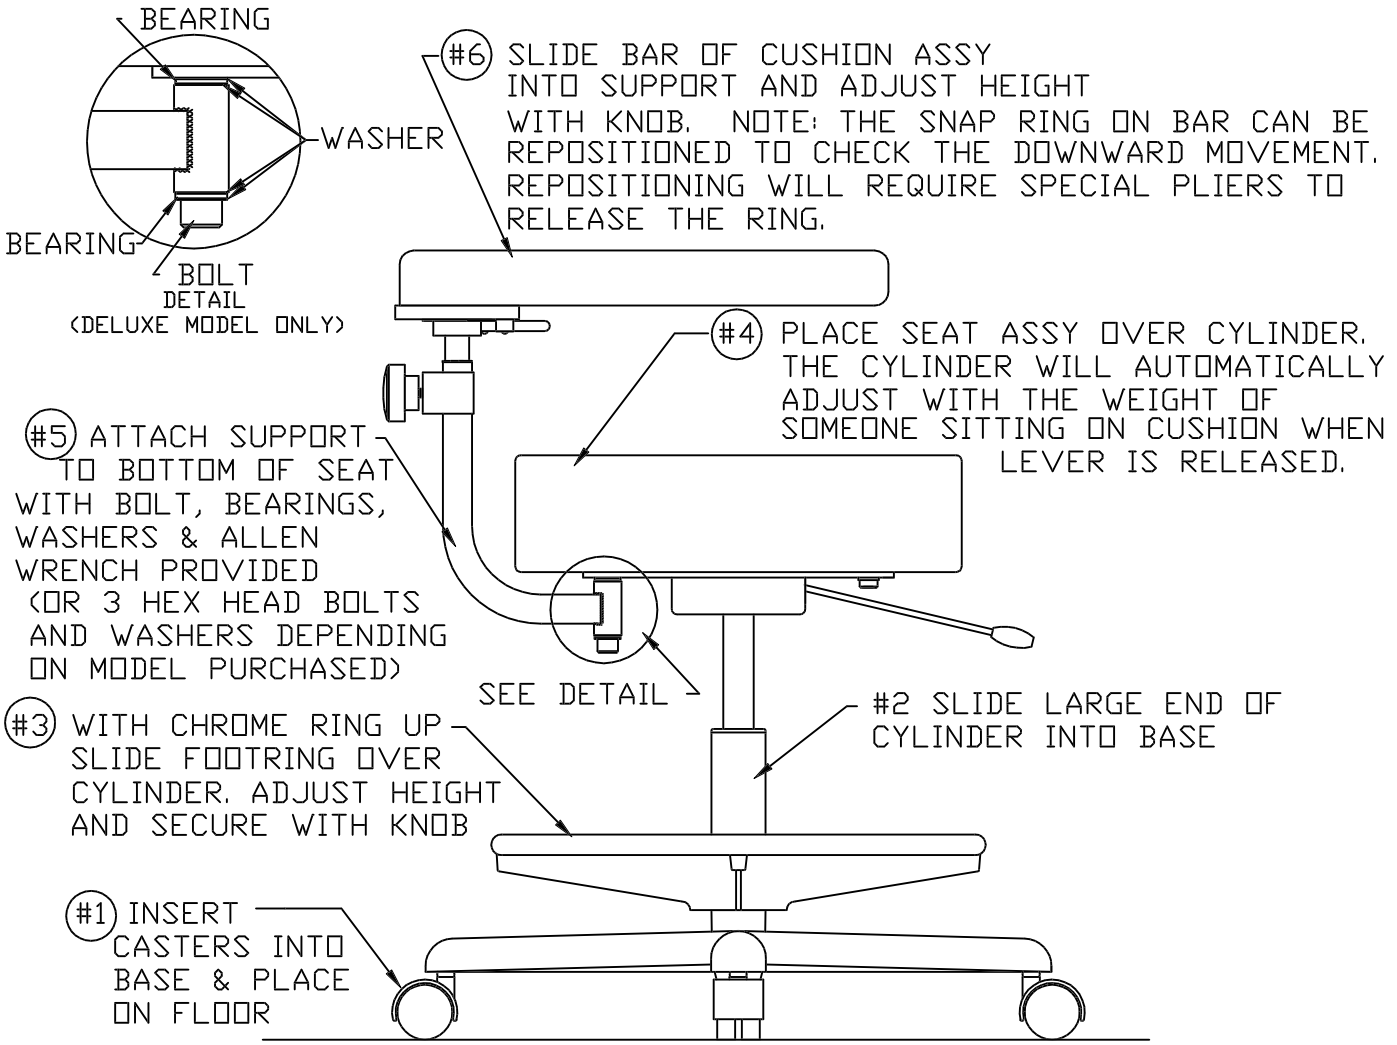
BEARING
WASHER
BEARING
BOLT
DETAIL
(DELUXE MODEL ONLY)
#6 SLIDE BAR OF CUSHION ASSY INTO SUPPORT AND ADJUST HEIGHT WITH KNOB. NOTE: THE SNAP RING ON BAR CAN BE REPOSITIONED TO CHECK THE DOWNWARD MOVEMENT. REPOSITIONING WILL REQUIRE SPECIAL PLIERS TO RELEASE THE RING.
#4 PLACE SEAT ASSY OVER CYLINDER. THE CYLINDER WILL AUTOMATICALLY ADJUST WITH THE WEIGHT OF SOMEONE SITTING ON CUSHION WHEN LEVER IS RELEASED.
#5 ATTACH SUPPORT TO BOTTOM OF SEAT WITH BOLT, BEARINGS, WASHERS & ALLEN WRENCH PROVIDED (OR 3 HEX HEAD BOLTS AND WASHERS DEPENDING ON MODEL PURCHASED)
SEE DETAIL
#2 SLIDE LARGE END OF CYLINDER INTO BASE
#3 WITH CHROME RING UP SLIDE FOOTRING OVER CYLINDER. ADJUST HEIGHT AND SECURE WITH KNOB
#1 INSERT CASTERS INTO BASE & PLACE ON FLOOR

CLEANING UPHOLSTERY

NEVER USE ANY SOLVENT, ABRASIVE CLEANERS OR DETERGENT CONTAINING AMMONIA TO CLEAN THE UPHOLSTERY. DO NOT APPLY OIL, FURNITURE POLISH OR VARNISH TO THE UPHOLSTERY AS THESE ARE CERTAIN TO DAMAGE THE MATERIAL.

WHEN SOILED, THE UPHOLSTERY MAY BE CLEANED IN THE FOLLOWING MANNER:

(1) USE LUKEWARM WATER AND ANY MILD SOAP.
(2) WORK UP THIN SUDS ON A CLOTH OR FINE SYNTHETIC SPONGE AND GO OVER THE UPHOLSTERY SURFACE.
(3) GO OVER THE SURFACES AGAIN, USING A CLOTH DAMPENED WITH CLEAR WATER TO RINSE OFF ALL SOAP.
(4) FINISH BY DRYING THE SURFACE WITH A SOFT, LINT FREE CLOTH.

CLEANING AND POLISHING PAINTED AND POLISHED PARTS

PAINTED AND CHROME PLATED SURFACES SHOULD BE WIPED WITH A SOFT CLOTH AND WASHED OCCASIONALLY WITH A DAMP CLOTH AND MILD SOAP. FOR FURTHER CLEANING AND PRESERVATION OF THE SURFACE LUSTER, APPLY ONE OF THE AUTOMOBILE WAXES.

LUBRICATION

THE ONLY LUBRICANT REQUIRED ON THE STOOL IS ONE OR TWO DROPS OF LIGHT HOUSEHOLD OIL TO EACH CASTER AXLE EVERY SIX MONTHS.

Knight®
by Midmark